

PANAVISION

Genesis Display Processor



Preliminary Instruction on LCD usage.

1st Edition Rev 1

Copyright Information

 
Copyright © 2006 Panavision Inc. All rights reserved. This document is not permitted to be distributed by anyone other than the employees of Panavision or its distributors. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the prior written consent of Panavision. Prior written approval from Panavision must be obtained for any and all derivative works or aggregate works incorporating any of the information in this document, except as provided for under normal copyright law.

Disclaimer


 

Information in this document is provided solely for the user's information and, while thought to be accurate, is provided strictly "as is" and without warranty of any kind, including liability or warranties relating to fitness for a particular purpose, merchantability, or infringement of any patent, copyright or other intellectual property right. Panavision reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation to notify any person of such revisions or changes. Specifications are subject to change without notice.



Panavision's obligations with respect to the products referenced herein are only as provided in Panavision's terms and conditions for rental. In no event shall Panavision, its employees or distributors be liable to you for any damages or losses, direct or indirect, arising from the use of any information contained in this document or the use of any products or services referenced within, or the information contained in, this manual.

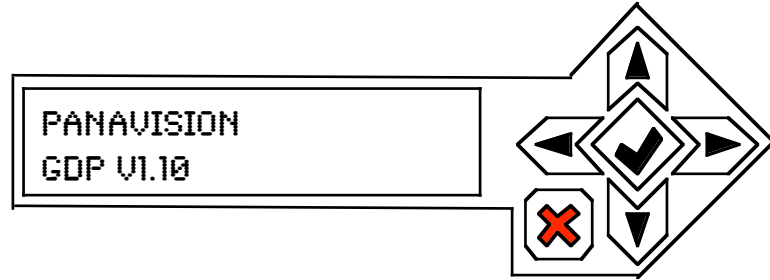Introduction



Rev B of the Genesis display processor adds an LCD to the front panel for local control. The LCD consists of a two line, 16-character display and 6 key keypad.


The GDP local control can be in one of three operational conditions. It's normal mode only shows status and allows selection of bypass using the  key. This is called STATUS mode. To change from this to other modes the  key is used. A short press will cause the unit to enter a condition enabling the selection of a number of presets that store all operational parameters, this is called PRESET mode. If the  key is held for more than 2 seconds a SETUP mode will be entered. If no user input is detected for more than 20 seconds the unit will revert to its STATUS mode to stop accidental changes.

In both PRESET and SETUP modes the  keys are used to scroll through a series of menus, the  key is then generally used to select or change the menu item.

 
GDP Local control

Local control using LCD keypad.

The GDP local control will be in one of three modes.

- Status mode – Only  is functional and controls Bypass function.
- Preset Mode – Default and user setting may be recalled.
- Setup Mode – Certain settings such as input mode may be configured.

Switching between the three modes is as follows.

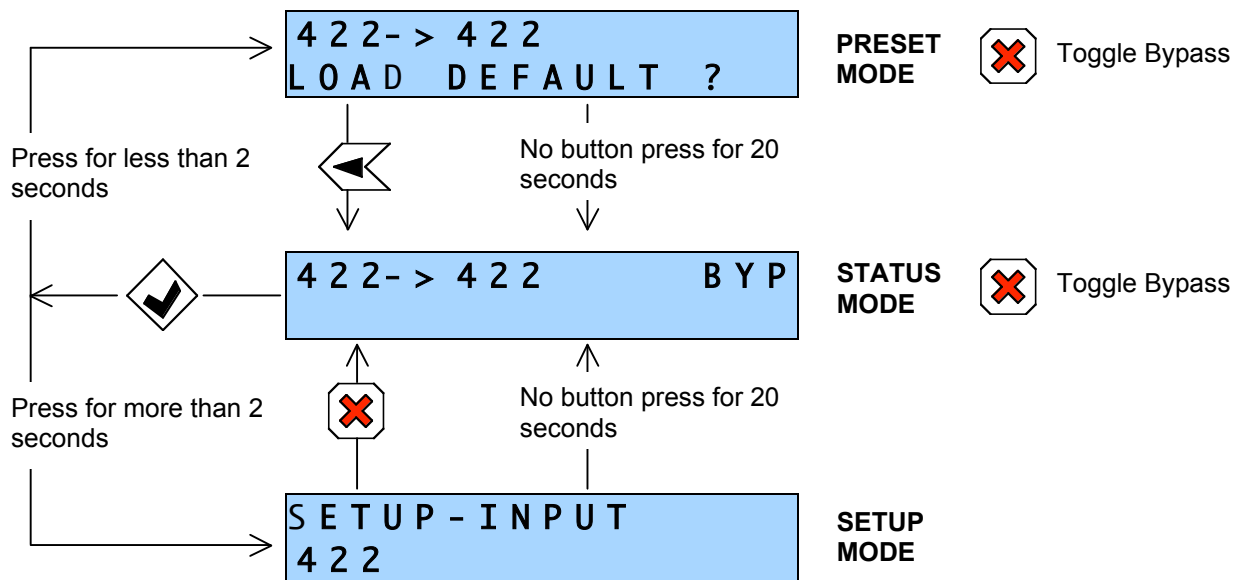

Preset Mode Control

4 2 2 - > 4 2 2
LOAD DEFAULT ?



Select Default Settings

4 2 2 - > 4 2 2
LOAD PRESET 1 ?



Select User Preset 1 Settings

4 2 2 - > 4 2 2
LOAD PRESET 2 ?



Select User Preset 1 Settings

4 2 2 - > 4 2 2
LOAD PRESET 3 ?



Select User Preset 1 Settings

4 2 2 - > 4 2 2
LOAD PRESET 4 ?



Select User Preset 1 Settings

4 2 2 - > 4 2 2
LOAD PRESET 5 ?



Select User Preset 1 Settings

4 2 2 - > 4 2 2
LOAD PRESET 6 ?



Select User Preset 1 Settings

Common controls active all the time



 
Enable/Disable Bypass



Return to Status Mode


Setup Mode Control

SETUP - INPUT
4 2 2




Change Input mode
Select 422, 444, CB or RMP

 SETUP - OUTPUT
4 2 2




Change Output mode
Select 422 or 444

 SETUP - STANDARD
2 3 . 9 8 P s F




Change System Frame rate
Select 23.98, 29.97 etc

 SETUP - LCD
7 0




Change LCD Brightness
5 – 100%

 
SETUP - SAVE

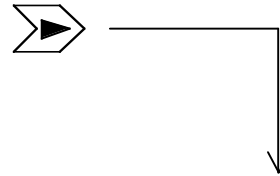

STATUS - TEMP
4 2 . 5 0 deg C

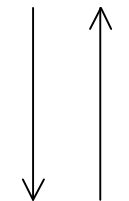 

SETUP - SAVE
SAVE DEFAULT ?

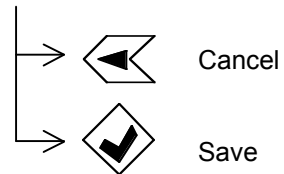 

Common controls active all the time



Exit Setup mode and return to
status mode